


# IQ GLASS S-LINE QUICK INSTALL GUIDE



**STEP 1**

CHOOSE  
INSTALLATION  
LOCATION

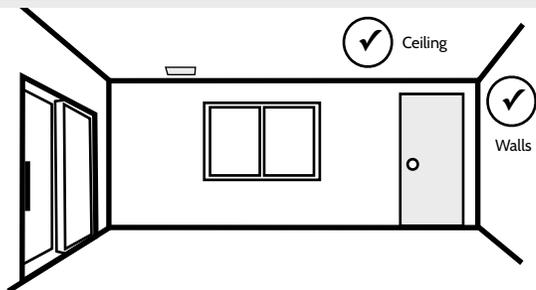

## Mounting Height:

It is recommended the sensor be mounted at least 6.5ft above the floor. All protected glass must be within a clear line of sight of the sensor and within the 20ft max range.

## SPECIFICATIONS

Sensor: 2.75" H x 3.88" W x 1.5" D

Frequency: 319.5MHz

Battery: 3V lithium CR123A (x2)

Operating Temperature: 14°F to 122°F

Detection Range: 20ft Max

Compatible with Qolsys control panels

Supervisory signal interval: 70 min (approximately)


**STEP 2**

SWITCH  
CONFIGURATION

## Sensitivity:

Two dip switches allow you to customize the sensitivity and detection range of the IQ Glass S. The factory default is set to MAX. Please refer to the table below to customize the sensitivity.

SENSITIVITY	DETECTION RANGE	1	2
MAX	20ft	OFF	OFF
MEDIUM	13ft	OFF	ON
LOW	8ft	ON	OFF
LOWEST	5ft	ON	ON

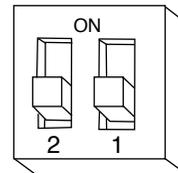


## Test Mode:

Place the sensor in test mode by removing the battery tabs or disconnecting the batteries for 30 seconds. Test mode is active for 5 minutes upon the sensor powering on. The LED blinks every second when the sensor is in test mode. Please refer to the table below for the LED indicator guide. This sensor will exit test mode after the first 5 minutes of power up.

## LED Indicator Guide:

CONDITION	RED LED
Power Up	Flash 3 times, flash once per second
Test Mode, event detected	Flash once per second (slow flashing)
Test Mode, alarm	Flash 2 second (quick flashing)
Working, alarm	ON 5 seconds
Low Battery	Flash once every 30 seconds

**STEP 3** SECURE TO SURFACE

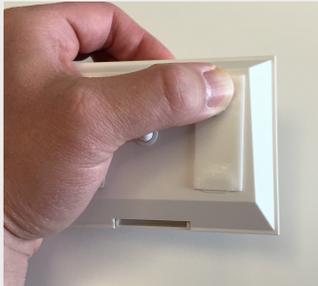

**STEP 4** DETACH FACE PLATE



**STEP 5** REMOVE BATTERY TAB



**STEP 6** REPLACE FACE PLATE



**STEP 7** LEARN INTO PANEL



Place your panel in "autolearn" mode



Open and close the case to "tamper" the device

ADD

Customize name and settings as desired and touch "ADD"



ASK **JENNI**  
Qolsys



Document#: IQGS-QG-6-17  
Revision#: 6/5/17  
Issue Date: JUN 2017  
Qolsys Product #: QS1431-840

Qolsys Inc. proprietary.  
Reproduction without permission is not permitted.  
FCC ID: 2ABBZ-RF-ARGB  
IC: 11817A-RFARGB

**GOT QUESTIONS?**  
CONTACT TECH SUPPORT  
[TechSupport@Qolsys.com](mailto:TechSupport@Qolsys.com)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.